


1. Check the air pressure is up to operational levels.

2. Place the top half of the lock assembly over the valve levers and adjust the set screws to allow the unit to just fit, slide down between the dash and valve levers.

This is a one time adjustment unless the Air Cuff® is moved for securing another tractor. Always readjust the unit set screws in a new location for a perfect fit.

3. Slide the bottom of the assembly into place and press together.

4. Push in the lock button until it clicks to secure the air valves.

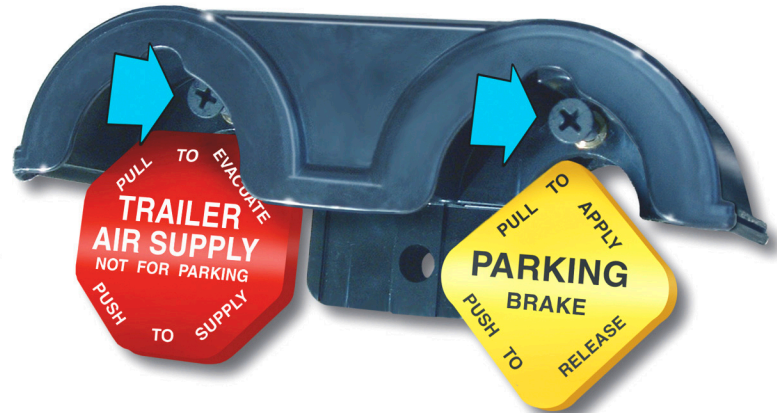

*Patented

TRANSPORT SECURITY, INC.

820 South Pine Street • Waconia, Minnesota 55387 • Phone and Fax (952) 442-5625

www.transportsecurity.com