

1. Check the air pressure is up to operational levels.
2. Place the top half of the lock assembly over the valve levers.



3. Slide the bottom of the assembly into place and press together.
4. Push in the lock button until it clicks to secure the air valves.



* Patented

TRANSPORT SECURITY, INC.

820 South Pine Street • Waconia, Minnesota 55387 • Phone and Fax (952) 442-5625
www.transportsecurity.com